## Spring set x6

**Fits:** All manual operated Pv90, Pv91M, Pv98, Q200 and Q300 valves **Consumption:** 1 kit per 6 valve sections



- **1.** Dismount the cover (A) on the spring side of the spool using a 5mm hexagon wrench.
- 2. Press the lever (B) to push the spool into it's end position and mount the spring holder (C) (can be bought separately) over the centering spring.
- **3.** Use a 17mm socket wrench to loosen the spring bolt D.
- **4.** Remove the lever link and dismount the console **(**), then carefully pull the spool out from the valve body.
- 5. Unscrew the spring bolt D and separate the spring package G from the spool.
- **6.** It is recommended to also change the seals and glyd rings while doing this operation. Seals and glyd rings can be bought separately depending on wich spring you will be using.
- 7. Mount the new seal (H) on the spring side of the spool.
- 8. Compress the spring ) by hand or with a fitting tool and remove it. Mount the new spring in the spring holder c, in the same way as the old spring.
- **9.** Remount the spring package G and tighten the spring bolt D by hand.

Contains	
6 × Compression spring	6 x Compression springs
(labeled white) Force 130-1	(labeled blue) Force 70-80 N



## Spring set x6

**Fits:** All manual operated Pv90, Pv91M, Pv98, Q200 and Q300 valves **Consumption:** 1 kit per 6 valve sections



- **10.** Place grease (Shell GADUS S3 A1300C 2 SRS 4000) (Can be bought separately) on the spring package and around the spool on both sides of the seal.
- **11.** If bought, place the large o-ring in the cavity on both sides of the valve.
- 12. Gently push the spool back into the valve.
- **13.** Push the other new seal (H) onto the spool end.
- **14.** Place grease laround the spool on both sides of the seal and on the console.
- **15.** Remount the console (F) and the lever link (E).
- **16.** Tighten the spring bolt  $\bigcirc$  with torque 6 ±1 Nm, before taking away the spring holder  $\bigcirc$ .
- **17.** Remount the spring cover (A).
- **18.** Repeat all steps on the remaining valve sections.

Contains		
	6 x Compression springs (labeled white) Force 130-154 N	



6 x Compression springs (labeled blue) Force 70-80 N

OR