

# Transportation lock 3G, joystick

**Fits:** Joystick D3, left and right



**Consumption:** 1 transportation lock per joystick



**Note!**

Make sure that the control system is turned off!  
- to avoid accidental actuation of the crane when you mount the transport fixture.

The transportation lock only fits newer D3 joints with serial number 5000 and higher.

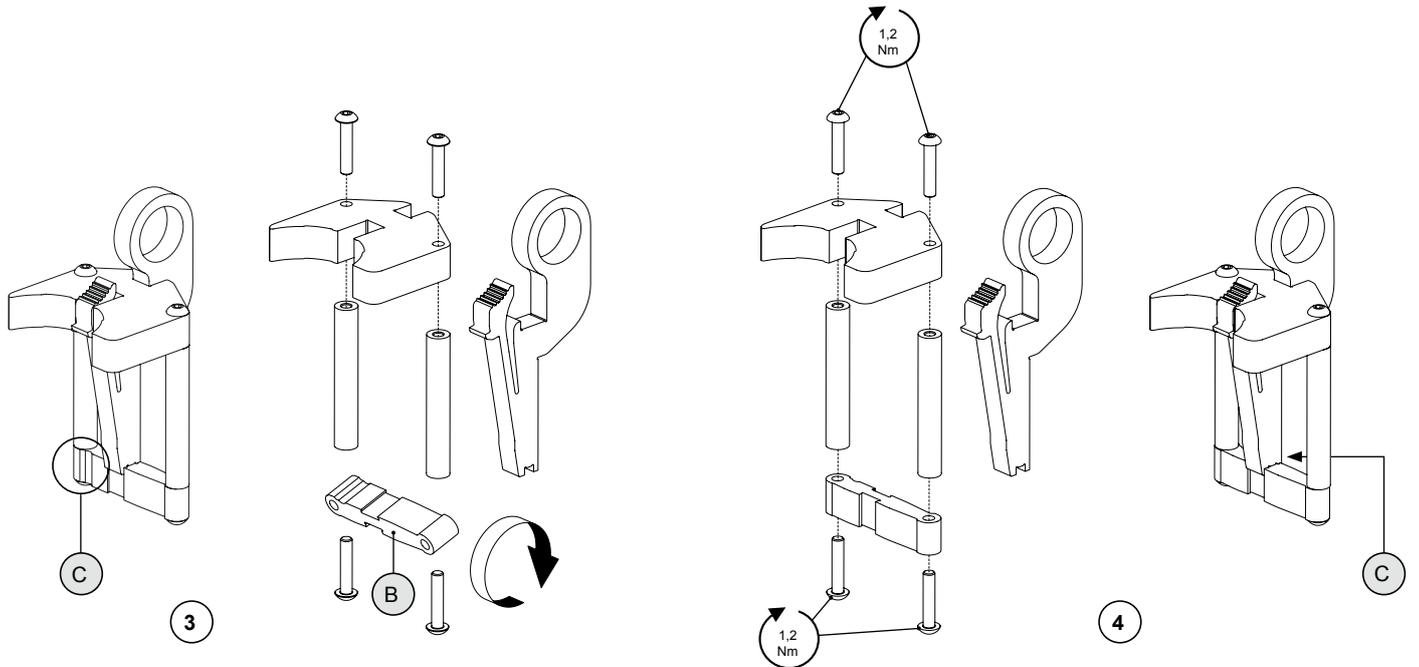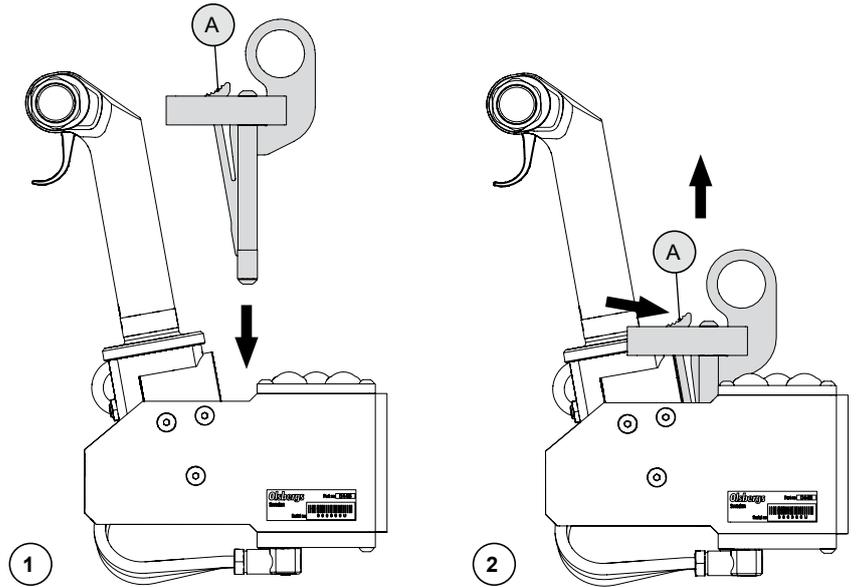

1. **To lock:** Push down the transportation lock until the thumb button (A) “clicks” in place.
2. **To unlock:** Press and hold the thumb button (A) at the same time as you pull the transportation lock up.  
**If you should experience a gap or that the locking is not tight enough - follow step 3 and 4.**
3. Disassemble the transportation lock and rotate the bottom part (B) 180° in the same direction as the arrow.
4. Reassemble the transportation lock and tighten the screws carefully. The groove (C) should now be facing the backside of the transportation lock. The fit should now be better in locked position.

**Contains**



1 x Transportation lock